NET RETURN

NO FLY ZONE SIDE BARRIERS

Assembly Instructions

The information in this document is subject to change without notice. © Copyright The Net Return™ 2007, 2025. All rights reserved.

783401

Read all the warnings before you assemble and use the sports net.



Be sure that you orient your net properly. The Net Return logo always faces the athlete.

Avoid exposing your net to prolonged ultraviolet light as this may fade and/or degrade the sleeve fabric. When not in use, move to a shaded area.


Maintain a safe clearance around and above your net. When orienting your net, consider the surrounding area. Athletes are responsible for injury or damage caused by a mis-hit ball.



Do not hang, kick, cut or climb on your net. Avoid contacting the net with any sporting equipment other than a ball.

Danger of tipping over! Always weight base with sandbags.


1

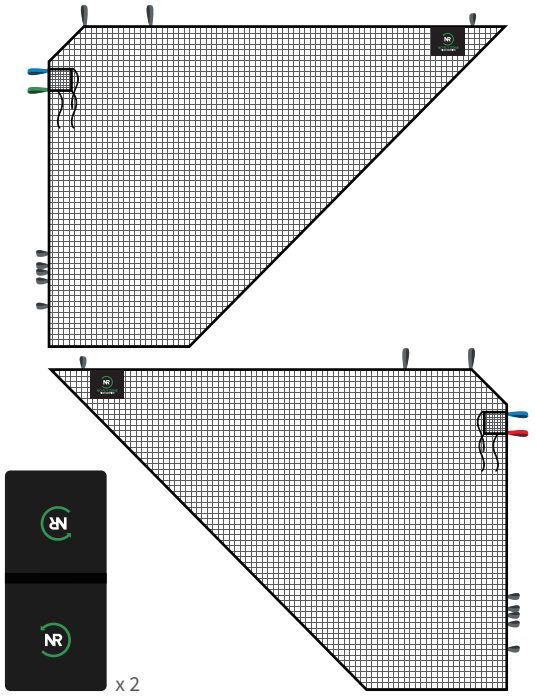


- Lay out the 2 side barriers and 2 sandbags as shown.

NOTE: Throughout this manual, certain images contain parts that have been colored yellow. This is meant to bring specific attention to a specific step and is not a representation of their actual color.

2

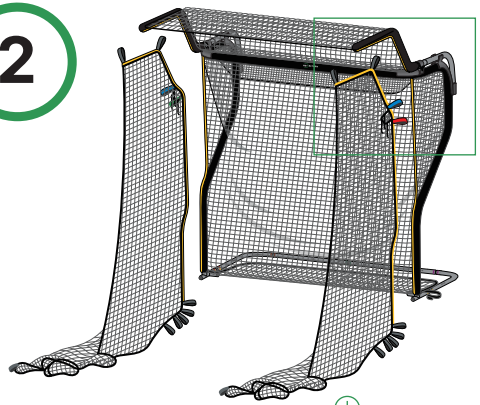


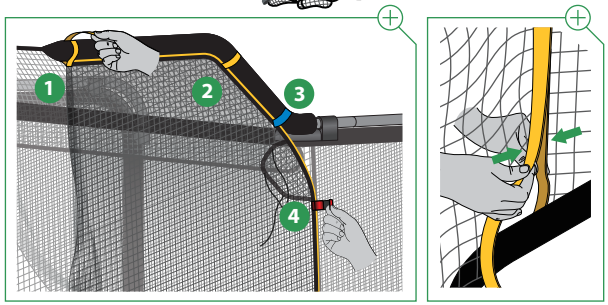


TIP: If it is easier, gently lay your net on its back to complete this step.

- Face your assembled net and find the side barrier with the RED strap. Attach it to the RIGHT side of the net.
- Fasten the four loops numbered above as shown, and stick the Velcro edges of the side barrier and No Fly Zone together.
- Continue securing the Velcro edges of the side barrier all the way down the net.
- Repeat for the other side barrier.


3

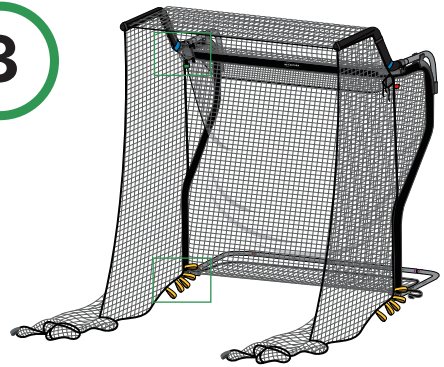


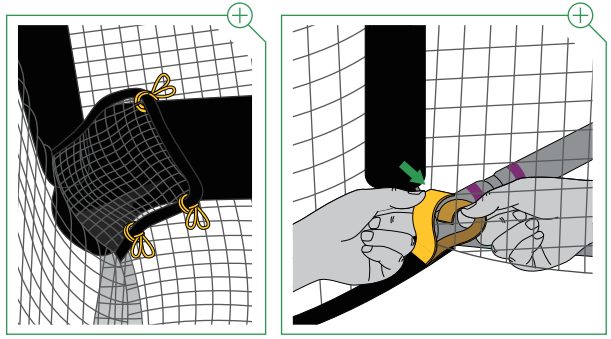

- Fasten the square netting tab on each side barrier to the net to block balls from escaping the corners.
- Use the loop near the bottom of the side barrier that best fits your model to secure it to the bottom of the net at the base of the frame.
- Repeat for the other side barrier.

4

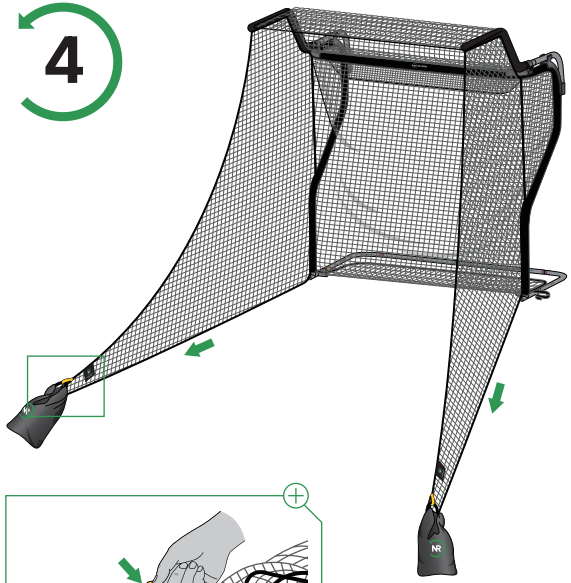

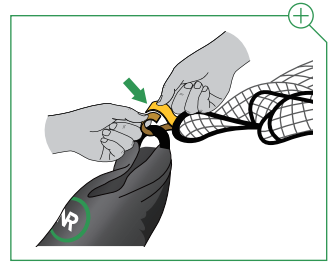

- Fill each sandbag with about 15 lbs (7 kg) of sand.
- Fasten the remaining loop at the end of each side barrier through the sandbag handle and position the sandbag at your desired distance (flared wide or straight back).
- Congratulations, you've successfully installed the Side Barriers!